



CARACTÉRISTIQUES

CONTENU DU PACKAGING

AVERTISSEMENTS & CONSIGNES DE SÉCURITÉ

1. Allumer/éteindre l'enceinte.
2. Écouter/mettre en pause la musique et répondre aux appels/raccrocher.



FR
Cet appareil



À DÉPOSER
EN MAGASIN

OU



À DÉPOSER
EN DÉCHÈTERIE

... Pour réduire les déchets, ne jamais jeter, écraser ou
... le produit avec les ordures ménagères, mais dans un centre agréé au recyclage.

KeyOuest

«MUSIK» WIRELESS SPEAKER

Ref: KO055830

Thank you for purchasing a KeyOuest product. We hope you will be completely satisfied with it.

CHARACTERISTICS

- Autonomy: 4h
- Built-in battery: 1200 mAh
- Bluetooth® version 5.1
- IPX4 protection rating: protection against water splashes (10 min splashes imitating conditions of heavy perspiration and moderate rain)
- Maximum radio frequency power: 4 dBm
- Frequency range: 2.402 GHz - 2.480 GHz
- Warranty: 2 years

PACKAGING CONTENT

- 1 Wireless speaker
- 1 USB-C charging cable
- 1 User manual

WARNINGS & SAFETY INSTRUCTIONS



This manual will familiarise you with the operation of the product. Keep it for future reference.

- This product has a built-in lithium battery, please use it with care.
- This speaker must be charged with the correct voltage to avoid damage to the product and associated equipment.
- Handle the speaker with care. A blow, shock, or drop, even from a low height, may damage it.
- This product is not a toy. Keep it out of the reach of children. Supervise children to ensure that they do not play with the product.
- Do not attempt to disassemble or reassemble your speaker.
- Your device transmits and receives radio frequencies around 2.4 GHz. These emissions can interfere with the operation of many electronic devices. To avoid accidents, turn off your speaker when you are in the following places:
 - Places where flammable gas is present, such as hospitals, trains, aeroplanes or gas stations,
 - near automatic doors or fire alarms.
- If you have a pacemaker or other prosthesis, ask your doctor for advice.
- The receiver operates within a range of approximately 10 metres. The communication range may vary depending on obstacles (people, metal, walls, etc.) or the electromagnetic environment.
- Do not use cleaning agents containing alcohol, ammonia, benzene or abrasive substances. If cleaning is necessary, use a soft cloth, moistening it with a small amount of water or water and mild soap if necessary.
- Do not place the speaker on the edge of a table or shelf to avoid dropping it. When using the maximum volume, it is recommended to place the speaker on a stable surface due to the vibration of the speaker.
- Do not place this product near a heat source such as a radiator, heater, cooker or other heat-producing appliance.
- Store this product in a dry place. Never place or use the product in damp or dirty conditions.
- Make sure the speaker is turned off when not in use and do not leave the battery fully discharged for a long period of time.
- Unplug the speaker during a thunderstorm.
- Stop using this product if any abnormalities occur, such as abnormal smell, overheating, discoloration or change in shape.
- To avoid possible hearing damage, do not listen at high volume levels for long periods of time.

2024/01/01/MMS

PRODUCT USE

MAIN FUNCTIONS

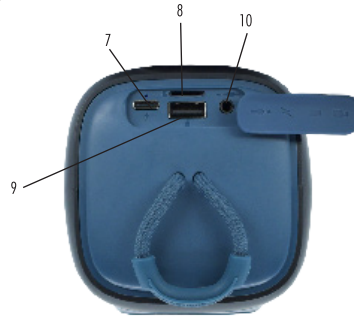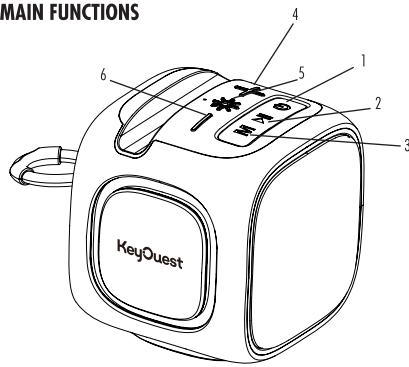

1. Switch the speaker on/off.
2. Listen to/pause music and answer/hang up calls.
3. Bluetooth®/Micro SD card/USB stick/auxiliary input line modes.
4. Increase volume/Skip to next song.
5. Control LEDs (8 effects available).
6. Lower volume/Play previous song.
7. USB-C charging port: use the included charging cable and plug it into a suitable charger to charge the speaker.
8. Insert a USB stick to play MP3 music.
9. Insert a Micro SD card to play MP3 music (maximum capacity 64 GB).
10. AUX audio input. Connect the speaker to a computer, mobile phone or other audio source using a suitable audio cable.

Non-contractual photos

CHARGING THE SPEAKER

To protect battery performance, avoid using the speaker while charging.

The speaker does not have a power bank function, so do not attempt to charge other devices via the USB interface.

Use a 5V=1A charger connected with the included charging cable for the speaker to charge. The red light is on when charging. The red light is off when the device is fully charged.

BLUETOOTH® FUNCTION

Switch on the speaker and activate Bluetooth® mode using the «M» button.

Activate Bluetooth® on your smartphone or tablet and start searching for the speaker. Once «MUSIK KEYOUEST» appears on your phone or tablet, click on it to pair your device with the speaker.

If there is a password prompt, please enter «0000» and click confirm connection.

Once connected, you will be able to adjust the volume, select the next or previous song or make a call.

TWS FUNCTION

1. In Bluetooth® mode, switch on two Musik speakers at the same time. Press and hold the mode button on one of the speakers and they will automatically pair successfully.

Press and hold the mode button to disconnect the TWS docking function.

2. When both speakers are connected, activate the Bluetooth® function on the mobile phone and start searching for the speaker. Once «MUSIK KEYOUEST» appears on your phone or tablet, click on it to pair your device with the speakers.

3. When the two speakers are connected, the Bluetooth® functions are synchronised. For example, long press the stop button on either speaker and the other will also stop in sync.

4. When both speakers are connected, the optimum distance between the two speakers is approximately 5 metres.



Directive 2012 / 19 / EU
Proper disposal of this product
Electronic waste should not be disposed of with household waste. Please
recycle it with our approved recycling facility and check with your local
authority for recycling advice.

Guarantee

The products are guaranteed not to fail due to manufacturing defects. This warranty does not cover defects due to misuse or normal wear and tear, so please keep your invoice attached to this guide.

Battery Recycling

This product contains a battery that may explode or release hazardous chemicals. To reduce the risk of fire, never disassemble, crush or puncture the battery, or dispose of it in fire or water. Do not dispose of the product with household waste, but in an appropriate recycling container.

SRDI declares that the product «Musik Wireless Speaker» is in compliance with Directives 2014/53/EU & 2011/65/EU. The full EU Declaration of Conformity is available on our KeyOuest website at: www.keyouest.fr

SRDI - 85430 La Boissière des Landes FRANCE